


**SCI**  
Resource Partners

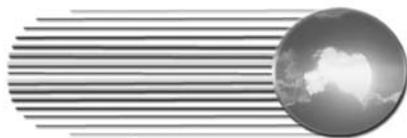

EdenPURE™

The world leader in products for a healthy and comfortable environment – bringing the Garden of Eden into your home.

## OPERATION AND WARRANTY MANUAL



### IMPORTANT SAVE THESE INSTRUCTIONS

To ensure you get the best results from your portable heater, please read this manual first and keep it for future reference.

For additional information please visit our website at [www.rppurchase.com](http://www.rppurchase.com) or call 1-866-786-8946

Thank you for purchasing the EdenPURE™  
Quartz Infrared Portable Heater.

# Healthy Home Resources

**WARNING**

**IMPROPER USE OF THIS HEATER COULD RESULT IN RISK OF FIRE, ELECTRIC SHOCK, AND INJURY TO PERSONS**

---

**WARNING**

**ANY REQUIRED SERVICE OTHER THAN FILTER MAINTENANCE SHOULD ONLY BE PERFORMED BY AN AUTHORIZED SERVICE REPRESENTATIVE**

---

**CAUTION**

**RISK OF ELECTRICAL SHOCK  
DO NOT OPEN**

**NO USER-SERVICEABLE PARTS INSIDE**



**Table of Contents**

Important Instructions .....2  
Care .....3  
Operation .....3  
Service .....3  
Filter Maintenance .....4  
Benefits .....5  
Performance Suggestions .....6  
Questions and Answers .....7, 8  
Warranty .....9  
Warranty Card .....10

# Important Instructions

## READ ALL INSTRUCTIONS BEFORE USING THE HEATER

- 1) The grill of the heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. If provided, use handles when moving this heater. Keep combustible materials such as furniture, pillows, bedding, papers, clothes and curtains at least 3 feet (0.9m) from the front of the heater and keep them away from the sides and the rear.
- 2) Extreme caution is necessary when any heater is used by or near children or invalids and whenever the heater is left operating and unattended.
- 3) Always unplug heater when not in use.
- 4) Do not operate any heater with a damaged cord or plug or after the heater malfunctions, has been dropped or damaged in any manner. Return heater to authorized service facility for examination, electrical or mechanical adjustment, or repair.
- 5) Do not use the heater outdoors or for heating construction sites.
- 6) The heater is not intended for use in bathrooms, laundry areas and similar indoor locations, an area with standing water, a shower or swimming pool. Never locate heater where it may fall into a bathtub or other water container.
- 7) Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Arrange cord away from traffic area and where it will not be tipped over.
- 8) To disconnect heater, turn controls to off, then remove plug from outlet.
- 9) Do not plug heater into any other cord connected device such as a power strip, surge protector, multiple outlet adapter, grounding adapter or outlet-type air fresheners. Plug into a 3-prong 110v 15amp or higher grounded circuit receptacle only.
- 10) Do not use an extension cord.
- 11) Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.
- 12) To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked.
- 13) Do not block the front or rear of the heater.
- 14) Do not place anything directly in front of the heater.
- 15) Do not force the filter to dry using alternative methods when performing filter maintenance; doing so could damage the filter.
- 16) Do not use it in areas where gasoline, paint, or flammable liquids are used or stored. A heater has hot or arcing or sparking parts inside.
- 17) Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.
- 18) Do not plug the heater into a loose fitting or broken receptacle.
- 19) Do not alter the heater's design or you will void the warranty.
- 20) The heater must be located immediately below a socket outlet.

**WARNING: In order to avoid overheating, do not cover the heater.**

**SAVE THESE INSTRUCTIONS**

# Care • Operation • Service

## READ ALL INSTRUCTIONS BEFORE USING THE HEATER

### Operation – 6 step set up for EdenPURE™ Models 500 & 1000

- 1) Unpackage heater: cut open tape area, fold back flaps and gently turn entire box upside down. Lift box from styrofoam packing. Remove styrofoam, turn upright. We recommend keeping the packaging for off season storage and any transporting needs.
- 2) Find a level and unobstructed location to place the unpackaged heater.
- 3) Plug the power cord directly into an unused grounded 110 volt 15 amp or higher circuit receptacle. Push the red rocker switch located on the front grill to the “I” position to turn it on; it will glow red when powered on.
- 4) Set the thermostat to the highest setting. In one to two minutes the fan will turn on and start delivering safe comfortable heat evenly for maximum efficiency.
- 5) When the temperature has reached a comfortable level, slowly turn the thermostat down until you hear a slight click. The thermostat will then cycle the heater on and off to maintain your desired temperature.
- 6) If you press the rocker switch to the off position “O” during a heat cycle, the fan will run until all internal heat has been expelled.



= ON

= OFF

### Cabinet Care

Wipe clean with a soft damp cloth.

### Heater Storage

When the heater is not going to be used for an extended period of time, please do the following:

- 1) Unplug Heater.
- 2) Wind up electrical cord so as to keep it off of the ground.
- 3) Cover the heater to prevent dust from accumulating on filter or internally.
- 4) Store the heater in a dry, low dust environment.

### Service

To replace a heating element or for other repairs or service, please contact the dealer you purchased your heater from or find an authorized service center in your area by visiting us at [www.rppurchase.com](http://www.rppurchase.com), or call us toll free at 1-866-786-8946.


**SAVE THESE INSTRUCTIONS**

# Filter Maintenance

## WASHABLE LIFETIME FILTER SYSTEM

The EdenPURE™ Heaters come equipped with a washable lifetime filter which is easy to clean. The manufacturer recommends the filter be cleaned once a month or as needed. To do this, follow these steps:

- 1) Pull up on the latches on each side of the filter to release the filter. Remove it from the rear of the unit by tilting out and lifting up at the same time.

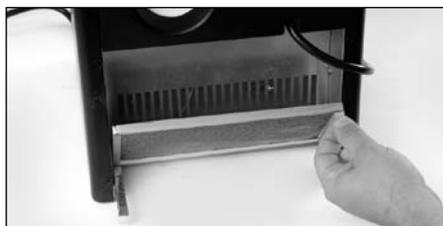

- 2) Run warm tap water over the filter, the opposite direction of air flow, until water runs clear. The filter might excrete some filtered residue, so be cautious not to drip on any stainable surfaces such as carpeting. You can also soak the filter in water mixed with a small amount of mild dish soap (don't forget to rinse with water after soaking filter).
- 3) Shake the filter over a sink until excess water is removed and allow it to drip dry completely before reinstalling. DO NOT force the filter to dry using any alternative methods.
- 4) Reinstall the filter to the rear of the unit and secure side latches by raising them up and locking them down in place.

---

### **WARNING**

**ANY REQUIRED SERVICE OTHER THAN FILTER MAINTENANCE SHOULD ONLY BE PERFORMED BY AN AUTHORIZED SERVICE REPRESENTATIVE**

---

# Benefits

## **Safety**

The EdenPURE™ Heaters have an excellent safety record. They produce safe, clean, economical heat by using Infrared Quartz Heating Elements. The unique EdenPURE™ Heaters use a process that virtually prevents wasteful accumulation of heat on the ceiling. These heaters deliver ultimate comfort by keeping the heat virtually even from “head-to-toe.”

## **Zone Heating Control**

EdenPURE™ Heaters provide heat only where and when it is needed. These heaters are less expensive per heated square foot and do not require costly duct installation. The heaters use standard 110 volt current and do not require special 220 volt wiring or a chimney vent.

## **Healthy Heat**

EdenPURE™ Heaters produce heat that is as safe as the infrared rays of the Earth’s sun, producing natural outdoor heat indoors.

The EdenPURE™ Heaters have low operating and maintenance costs. The fan motor is the only moving part and is equipped with quality trouble-free controls. There are no burners to rust, corrode, adjust, and no pilot light to waste energy. Safe, clean, long-life infrared Heating Elements provide the heat energy. They are easily and inexpensively replaced when needed. Average element life is 5000+ hours or approximately 3 to 5 years. The heaters are constructed of lifetime metals (copper and galvanized steel).

## **Ultimate Comfort**

EdenPURE™ Heaters provide even heat distribution and warm floors. The heaters thermostatically control, circulate, and recycle heated air at the floor for maximum use and comfort. The floor to ceiling temperature differential is minimal.

As the Quartz Infrared Elements operate, you will notice the heater’s ability to heat does not depend on a high-speed flow of air. Instead, the gentle flow of air promotes more effective heat mixing action and air stability at the floor.

These heaters will not burn, dry out, or otherwise pollute the air with impurities. This protects the humidity level and air quality important to breathing comfort and personal health.

EdenPURE™ Heaters have no messy tanks to fill, wicks to clean, wood to hassle with, ashes to carry, and leaves no soot film on walls or draperies. The heaters are convenient to use, just plug into any unused grounded 110 volt 15 amp or higher circuit receptacle.

# Performance Suggestions

To assure maximum performance of the EdenPURE™ Heater, please note the following recommendations:

- 1) For best results, do not locate the heater in an area with a high rate of air filtration and movement as the warm air will be exhausted.
- 2) Try placing the heater near a warmer inside wall and direct the output towards a cooler outside wall. The cooler outside wall will tend to draw the generated heat towards itself, which will allow for more efficient heating.
- 3) Placing the heater next to a cold air return will draw the heat away from area to be heated. Try closing or covering the cold air return. This will allow for more efficient heating. Experiment with the placement of the heater to see what works best for you.
- 4) To ensure maximum efficiency, a 40% minimum relative humidity should be maintained in the heated environment.
- 5) The heaters are designed to operate for maximum efficiency up to 70-72 degree range. Due to the soft heat concept, temperatures at 68 degrees feel as though it were 72 degrees. This is due to the heat mixing with humidity evenly for “head-to-toe” comfort.
- 6) When the heater is placed in an isolated area, i.e. basement or recreation area, the delivery registers and air return grills of the existing system should be closed in that area if possible.
- 7) Try placing the heater a few feet above the floor in rooms with large areas of bare concrete. Make sure the heater is secure and won't fall. This will allow for more efficient heating since concrete acts as a heat sink and will tend to draw the heat its direction.
- 8) Try lowering your central heating system to a lower temperature and placing the heater in the area you spend the majority of your time. Now set the EdenPURE™ heater to your comfort level. After all, there is no point to heating multiple rooms to 68+ degrees when not in use.
- 9) When heating larger areas, place the heater in a central location. If a ceiling fan is nearby, try using it at the same time to help distribute the heat evenly. Our suggestion, give it a try and see what works best for you.
- 10) If used in an extremely dirty or dusty area, the filter must be cleaned more frequently as the filter can clog and cause the heater to stop working.

# Questions and Answers

## **Why does the blower fan keep running after I have turned off the rocker switch?**

The Blower Fan will continue to run until the proprietary heat chambers have cooled down. After a few minutes the fan will shut off automatically.

## **Can the heating elements be replaced?**

Yes. To do so you must contact your local service center by visiting our website at [www.rppurchase.com](http://www.rppurchase.com) or by calling 1-866-786-8946.

## **The heater's airflow seems to have diminished?**

Make sure the rear intake is not blocked and that the filter is clean. Follow the Filter Maintenance procedure on page 4.

## **Once I initially plug the unit in and turn it on, how long will it take to heat my room?**

Generally, it takes less than an hour. Please remember that with any type of heating process there are many variables: size of the room, how well the room is insulated, how many door/windows, how much bare concrete (which acts as a heat sink with any type of heating), the opening and closing of an exterior door, etc...

## **Can I use the heater to heat multiple rooms at the same time?**

Yes. Keep in mind the heating will vary based on how open your floor plan is and the sizes of the rooms involved. We have heard back from customers stating that with the help of ceiling fans they have been able to heat multiple rooms simultaneously by placing the unit in a central room. Our suggestion, give it a try and see what works best for you.

## **My home is not insulated very well, will this heater help me?**

Yes, but keep in mind that rooms with little insulation will not retain the heat as efficiently.

## **Can I use the heater if I have vaulted or cathedral ceilings?**

Yes, but it will take a little longer to heat the room initially. Once the room has reached the desired temperature the heater will cycle on and off accordingly.

## **Can the heater be used in a bathroom?**

It is not recommended due to the high level of moisture in a bathroom.

## **Will I be able to use the heater in a basement or garage?**

Yes, but keep in mind that rooms with little insulation will not retain the heat as efficiently. Bare concrete floors, which act as a heat sink with any type of heating will absorb some of the heat. Placing the heater a few feet above the floor will allow for more efficient heating.

## **Can I use more than one heater at a time?**

Yes, but you should make sure they are not on the same circuit. Each heater and appliance should be on its own circuit.

**Can I use the heater on a job/construction site?**

The heater was not designed to be used in a high dust construction environment. Using the heater for this purpose will void your warranty.

**My thermostat setting is higher/lower than I want it to be?**

All Bi-Metal Mechanical Line Voltage thermostats are less accurate than digital thermostats, yet they are more durable. Pre-set dial placement and a differential rating of +/- 3 degrees also play a role in accuracy. This is absolutely normal and consistent with all Bi-Metal Mechanical Line Voltage thermostats. If the heater is maintaining your comfort level, it is working correctly.

**Can I move the heater around while it is operating?**

It is not recommended to move any portable heater while it is operating. We recommend moving the heater once the fan has completely turned off.

**What is the life expectancy for the Quartz Elements?**

Average element life is 5000+ hours or approximately 3 to 5 years. The Quartz Elements are replaceable by an authorized service dealer.

**What is Zone Heating?**

Zone heating is all about focusing heat where people spend the most time. After all, there is no point to heating multiple rooms to 68+ degrees when they are not in use.

**How many kilowatts per hour does the heater use?**

Heater Model 1000 was tested by an independent lab in a home environment and determined to use 1.263 kilowatts per hour. Heater Model 500 uses approximately half the kilowatts per hour as the 1000 model.

**What is the BTU Rating for the heaters?**

Model 500 Heater is approximately 2300 BTUs.

Model 1000 Heater is approximately 5000 BTUs.

The BTUs are basically irrelevant as a unit of measure since the patented heating process of the EdenPURE™ INTENTIONALLY does not operate using old inefficient methods of heat combustion, which is rated by using the BTU rule. Our heating method is far superior for efficiency, safety, comfort, and providing a natural healthy indoor environment.

**Can I use the heater and another appliance at the same time?**

Yes, as long as they are not on the same circuit. Zone heaters are considered to be an appliance. You should not run more than one larger appliance on a single circuit breaker. Your freezer, refrigerator, microwave oven, washing machine, dryer, and other such appliances should not share a circuit breaker.

**Can I use an extension cord, surge protector, or power strip with my heater?**

NO. It is designed to plug directly into a grounded 110 volt 15 amp or higher circuit receptacle.

**I don't have a grounded outlet; can I use a cord adapter or remove the grounding plug?**

NO. If you don't have a grounded outlet, contact a licensed electrician in your area for advice. Removing or altering any part of the heater will void the warranty.

# One Year Limited Warranty

## WARRANTY:

SCI Resource Partners warrants this product, to the original purchaser or gift recipient, to be free from defects in workmanship and materials under normal use and service, for a period of one year from the date of purchase.

## LIMITATIONS:

ALL WARRANTIES IMPLIED BY LAW, INCLUDING THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE EXPRESSLY LIMITED TO THE DURATION OF THE WARRANTY SET FORTH ABOVE. Some jurisdictions do not allow limitations on the length of the implied warranty, so the above limitation may not apply to you.

IN NO EVENT SHALL SCI RESOURCE PARTNERS BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES, LOSS OF PROFIT, OR MEDICAL EXPENSES CAUSED BY ANY DEFECT, FAILURE, MISUSE, OR MALFUNCTION OF THE PRODUCT. Some jurisdictions do not allow the exclusion of limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. The Company will not be responsible for damages or losses, direct or indirect, caused by misuse, abuse, accident, negligence, conditions of transportation or storage, or failure to follow instructions. The Company will not be responsible for any statements that are made or published, written or oral, that are inconsistent with this written warranty, or which are misleading or inconsistent with the facts as published in the literature or specifications by the Company.

## WARRANTY RESTRICTION:

This warranty is invalid if the factory-applied serial number has been altered or removed from the product.

## WARRANTY CLAIM PROCEDURE:

To obtain warranty service customer must:

- 1) Provide proof of purchase in the form of a Bill of Sale or receipted invoice, evidence unit is within the warranty period.
- 2) Contact the Dealer you purchased your equipment from.

If the original order was shipped from our facility within 30 days, SCI Resource Partners will pay shipping both ways.

Within 31-60 days the customer will pay shipping charges back to the point of purchase for repair or replacement. SCI Resource Partners will pay for return shipping to the customer.

After 61 days the customer will be responsible for shipping expensed incurred both ways.

If the original order was purchased from a local dealer - return to your local dealer for service

## EXTENDED WARRANTY:

Within 30 days from date of purchase customer will have the option of purchasing extended warranty coverage through their Authorized local Service Center.

For more information, or for assistance, please call or write:

Resource Partners  
7800 Whipple Ave NW  
North Canton, OH 44720  
1-866-786-8946

# Warranty Card

Suarez Corporation Industries  
Resource Partners  
7800 Whipple Ave. NW  
North Canton, Ohio 44720-6928

Please clip and return the  
warranty card below.

---

## SCI Resource Partners' Warranty Registration

Please return this card within 30 days of purchase to  
activate your warranty. Thank You.

E-mail Address \_\_\_\_\_ @ \_\_\_\_\_

Firstname \_\_\_\_\_ M.I. \_\_\_\_\_ Lastname \_\_\_\_\_

Street \_\_\_\_\_ Apt.# \_\_\_\_\_

City \_\_\_\_\_ State \_\_\_\_\_ Zip code \_\_\_\_\_

Model purchased \_\_\_\_\_ Serial# \_\_\_\_\_

Date of purchase: \_\_\_\_\_ Place of Purchase: \_\_\_\_\_

Name of Representative or Service Center: \_\_\_\_\_

Are you interested in your own Distribution Business? Yes \_\_\_ No \_\_\_

Phone : \_\_\_\_\_ - \_\_\_\_\_ - \_\_\_\_\_ Best time to contact you \_\_\_\_\_

# Thank you for purchasing the EdenPURE™ Heater!

Please register your warranty information by  
mail within 30 days of purchase.

Suarez Corporation Industries  
Resource Partners  
7800 Whipple Ave. NW  
North Canton, Ohio 44720-6928

1-866-786-8946  
[www.rppurchase.com](http://www.rppurchase.com)



First-Class  
Postage  
Required  
Post Office  
will not deliver  
without proper  
postage.

Suarez Corporation Industries  
Resource Partners  
7800 Whipple Ave. NW  
North Canton, Ohio 44720-6928

